

MOZA Air 2 Camera Compatibility List (For Firmware 1.0.4)

Brand	Model	Camera Select Setting	Cable	Shutter	Record	ISO	TV	AV	Auto Focus	Electronic Focus	Power Supply	Note			
Canon	EOS R	M3C-USB	M3C-Micro with Micro to Type C adapter**	✓	✓	✓	✓	✓	✓	✓	-	Camera firmware Ver.1.0.0			
	EOS RP		✓	✓	✓	✓	✓	✓	✓	✓	-	Camera firmware Ver.1.0.1			
	EOS 6D Mark II		M3C-Mini	M3C-Micro with Micro to Type C adapter**	•	✓	✓	✓	✓	✓	✓	-	Camera firmware Ver.1.0.0		
	EOS 6D				•	✓	✓	✓	✓	✓	✓	✓	-		
	EOS 60D				•	✓	✓	✓	✓	✓	✓	✓	✓	-	
	EOS 77D				•	✓	✓	✓	✓	✓	✓	✓	✓	-	
	EOS 80D				•	✓	✓	✓	✓	✓	✓	✓	✓	-	
	EOS 50D				•	✓	✓	✓	✓	✓	✓	✓	✓	-	
	EOS 5D3				•	✓	✓	✓	✓	✓	✓	✓	✓	-	
	EOS 800D/Kiss X9i				•	✓	✓	-	✓	✓	✓	✓	✓	-	Camera firmware Ver.1.0.1
	EOS 5D Mark IV	•	✓	✓	✓	✓	✓	✓	✓	✓	-				
	EOS 200D II	M3C-Micro	M3C-Micro	•	✓	✓	✓	✓	✓	✓	✓	-	Camera firmware Ver.1.0.0		
	EOS M50			•	✓	✓	✓	✓	✓	✓	✓	-	Camera firmware Ver.1.0.0		
	EOS 90D			•	✓	✓	✓	✓	✓	✓	✓	-			
EOS M6 II	•			✓	✓	✓	✓	✓	✓	✓	-				
EOS M5	Shutter Cable	MCSC-C1**	•	✓	-	-	-	-	-	-	-				
EOS 750D/Kiss X8i			•	✓	-	-	-	-	-	-	-	-			
SONY	Alpha 7R	M3C-USB	M3C-Micro	•	✓	✓	✓	✓	✓	✓	-				
	Alpha 7S			•	✓	✓	✓	✓	✓	✓	-	-	Camera firmware Ver 3.20		
	Alpha 6000			•	✓	✓	✓	✓	✓	✓	-	-	Camera firmware Ver 3.21		
	Alpha 6300			•	✓	✓	✓	✓	✓	✓	-	✓			
	Alpha 6400			•	✓	✓	✓	✓	✓	✓	✓	✓	A6400 does not support playback when controlled by gimbal due to limitation of PC Remote. Camera firmware Ver.2.00		
	Alpha 6500			•	✓	✓	✓	✓	✓	✓	-	✓			
	Alpha 7S II			•	✓	✓	✓	✓	✓	✓	-	✓			
	Alpha 7R II			•	✓	✓	✓	✓	✓	✓	-	✓			
	Alpha 7 II			•	✓	✓	✓	✓	✓	✓	-	✓			
	Alpha 7 III			•	✓	✓	✓	✓	✓	✓	-	✓			
	Alpha 7R III	•	✓	✓	✓	✓	✓	✓	✓	✓	Alpha 7 III does not support playback when controlled by gimbal due to limitation of PC Remote. Camera firmware Ver.3.10				
DSC-RX100M3	MCSC-Multi	MCSC-Multi	•	-	✓	✓	✓	✓	✓	-	✓				
DSC-RX100M4			•	-	✓	✓	✓	✓	✓	-	✓				
DSC-RX100M5			•	-	✓	✓	✓	✓	✓	-	✓				
			•	-	✓	✓	✓	✓	✓	-	✓				
SONY	Alpha 7R	MCSC-Multi	MCSC-Multi	•	✓	✓	-	-	-	✓	-	-			
	Alpha 7S			•	✓	✓	-	-	-	✓	-	-	Camera firmware Ver 3.20		
	Alpha 6000			•	✓	✓	-	-	-	✓	-	-	Camera firmware Ver 3.21		
	Alpha 6300			•	✓	✓	-	-	-	✓	-	✓			
	Alpha 6400	MCSC-Multi/C	MCSC-Multi/C	•	✓	✓	-	-	-	✓	-	✓	A6400 does not support playback when controlled by gimbal due to limitation of PC Remote. Camera firmware Ver.2.00		
	Alpha 6500			•	✓	✓	-	-	-	✓	-	✓			
	Alpha 7S II			•	✓	✓	-	-	-	✓	-	✓			
	Alpha 7R II			•	✓	✓	-	-	-	✓	-	✓			
	Alpha 7 II			•	✓	✓	-	-	-	✓	-	✓			
	Alpha 7 III			•	✓	✓	-	-	-	✓	-	✓	Alpha 7 III does not support playback when controlled by gimbal due to limitation of PC		
	Alpha 7R III			•	✓	✓	-	-	-	✓	-	✓			
	Alpha 7R IV			•	✓	✓	-	-	-	✓	-	✓	A7R4 USB control is not available		
	DSC-RX100M3			•	✓	✓	-	-	-	✓	-	✓			
	DSC-RX100M4			•	✓	✓	-	-	-	✓	-	✓			
DSC-RX100M5	•	✓	✓	-	-	-	✓	-	✓						
Panasonic	G7	MCSC-Remote	MCSC-Remote	•	✓	✓	-	-	-	✓	-	-			
	G85			•	✓	✓	-	-	-	✓	-	-			
	GH3			•	✓	✓	-	-	-	✓	-	-			
	GH4			•	✓	✓	-	-	-	✓	-	-			
	S1	M3C-USB	M3C-Micro with Micro to Type C adapter**	•	✓	✓	✓	✓	✓	✓	-	Camera firmware Ver.1.2			
	GH5			•	✓	✓	✓	✓	✓	✓	-	Camera firmware Ver 2.6			
GH5s	•	✓	✓	✓	✓	✓	✓	✓	✓	-					
Nikon	Z6	M3C-USB	M3C-Type C with Micro to Type C adapter**	✓	✓	✓	✓	✓	✓	✓	-	Camera firmware C 3.00			
	Z7		✓	✓	✓	✓	✓	✓	✓	✓	-	Camera firmware C 3.00			
	D850		M3C-Micro	✓	✓	✓	✓	✓	✓	✓	-				
FUJIFILM	X-T2	Shutter Cable	MCSC-C1**	•	✓	✓	-	-	-	✓	-	-			
	X-T3			•	✓	✓	-	-	-	✓	-	-			
	X-T20			•	✓	✓	-	-	-	✓	-	-			
	X-T30			•	✓	✓	-	-	-	✓	-	-			
	X-A7			•	✓	✓	-	-	-	✓	-	-			
BMD	BMPPC 4K	M3C-USB	M3C-CP**	-	✓	-	-	-	-	-					
Z CAM	Z CAM E2	M3C-LANC	M3C-LANC**	-	✓	-	-	-	✓	-					
Note	* Indicates that the Canon DSLR camera is recommended to take the camera in MF mode. If the camera is shot in AF mode, there will be a low probability of focus failure and jam.														
	If power supply setting is turned off in the Sony camera's internal settings but the gimbal still supplies power to the camera. Please switch the cable selection (Multi ↔ Multi/C) on the gimbal to switch whether or not to power the camera.														
	Both M3C-Micro cable or M3C-Multi/C cable, when connecting the camera, if it appears "please check the connected device". Please restart the stabilizer and reconnect it once again.														
	These three Sony models can achieve electronic focus: Alpha 7 III, Alpha 7R III, Alpha 6400. If you can't make electronic focus, you can try the lens to be in AF mode, but the camera needs to be set to MF mode.														
**MCSC-C1, Micro to Type C adapter, M3C-Cp and M3C-LANC are optional, you can purchase those cables from <a href="https://store.gudsen.com/">https://store.gudsen.com/</a>															