

MOZA Slypod/Slypod E/Slypod Pro Camera Compatibility List

Brand	Model	Cable	Shutter
SONY	A5100	SCSC-S2	✓
	A6000	SCSC-S2	✓
	A7S	SCSC-S2	✓
	A7SM3	SCSC-S2	✓
	A7M2	SCSC-S2	✓
	A7M3	SCSC-S2	✓
	A7RM3	SCSC-S2	✓
	A9	SCSC-S2	✓
	RX100M5	SCSC-S2	✓
Canon	70D	SCSC-C1	✓
	5D2	SCSC-C2	✓
	7D2	SCSC-C2	✓
	6D2	SCSC-C2	✓
	5D4	SCSC-C2	✓
	10D	SCSC-C2	✓
Nikon	D850	SCSC-N1	✓
	D750	SCSC-N3	✓
	D7000	SCSC-N3	✓
	D810	SCSC-N1	✓
	D7200	SCSC-N3	✓
	D7100	SCSC-N3	✓
Notes	1. Click power button to trigger shutter and it can be realized in MOZA Master App as well.		
	2. Shutter cable support only picture taking but not video recording.		
	3. High speed of SDHC card is necessary for time-lapse photography because SDHC card with low writing speed may cause that picture cannot be stored successfully or completely.		
	4. It won't take picture when focusing mode of camera/lens is set as AF due to unsuccessful focus.		
	5. It is normal that shutter will be triggered when shutter cable is connected to certain camera.		