

Application Range of the Cable

SCSC-C1 Shutter Control Cable Camera Compatibility:

Canon 70D、60D、700D、650D、600D、550D、500D、450D、400D、350D
300D、1100D、100D、1000D、G10、G11、G12

Fuji: X-T2 (could control recording)

SCSC-C2 Shutter Control Cable Camera Compatibility:

Canon 7D、6D、5D2、5D3、5D、50D、40D、30D、20D、10D、1D、1DX、1DsM3、
1DsM4、D60/30、EOS-1v、HS/EOS-3、5D4、5DSR、7D2、6D2

SCSC-N1 Shutter Control Cable Camera Compatibility:

Nikon: D850、D810、D800、D700、D300、D300S、D200、D100、
N90S、D1 series、D2 series、D3、D3S、D3X、D4、D200、D1、
D1X、D2、D2H、
D2X、D2XS、D2HS、F5、F6、F90、F90X、F100.

SCSC-N3 Shutter Control Cable Camera Compatibility:


Nikon D600、D610、D7100、D7000、D90、D5200、D5100、D90、
D3200、D3100、D7200、D750、D600、D3300、D5300、D5600、
D3400、D7500

SCSC-S2 Shutter Control Cable Camera Compatibility:

Sony ILCE-6600、ILCE-6500、ILCE-6400、ILCE-6300、ILCE-6100、ILCE-
6000、ILCE-5100、ILCE-7M3、ILCE-7RM3、ILCE-7RM4、ILCE-7RM2、
ILCE-7SM2、ILCE-7M2、ILCE-7S、ILCE-7R、ILCE-7、ILCE-5000、
ILCE-3000、NEX-3N、a58、HX50、HX60、HX300、HX400、RX100M2、
RX100M3、RX100M4、RX100M5、RX100M6、RX100M7、RX10 II、
RX10III、RX10IV、RX1 R II、HX99、A99 II etc.

Note: Incompatible with RX100 (first generation), RX10, RX1R etc.

Operation Instruction

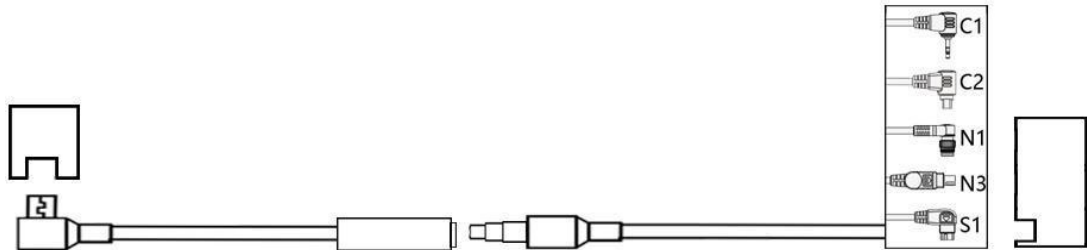

Slypod type-c port → type-c to 2.5mm female connector shutter control
cable → 2.5mm male connector shutter control cable → camera

Produce Knowledge About the USB Adapter



C1



C2



N1



N3



S2