

Install the upgrading software


Download the latest version of MOZA Assistant for Windows/Mac.

Please download the attached drive for the first time use.


Firmware Upgrade

1. Press and hold on the joystick button on the handgrip, then press the On/Off button to enter the upgrade mode;
2. Connect MOZA Mini to computer with a Micro USB cable;
3. Run the MOZA Assistant software on your computer and make sure network is connected properly.

Now you enter the firmware upgrading interface:

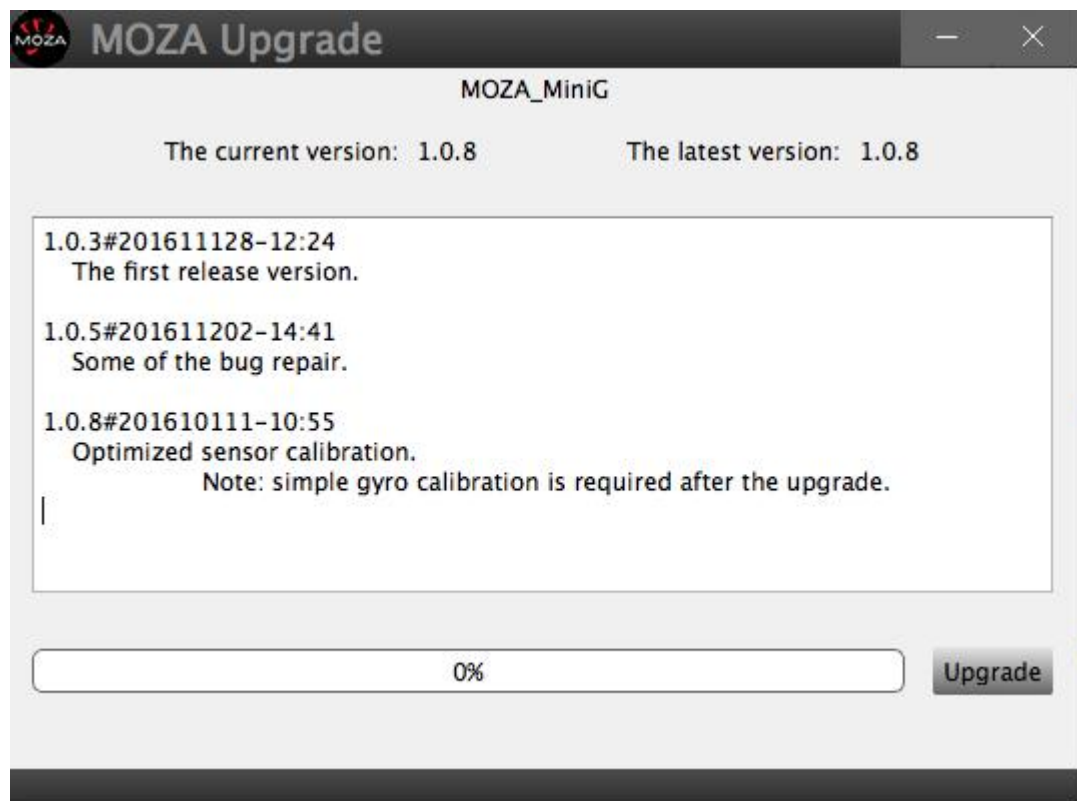


4. Click the button of upgrade, the MOZA Assistant will automatically download the latest firmware and start to upgrade. A prompting frame will pop out as below after upgrading is done. Turn off once completing upgrading.

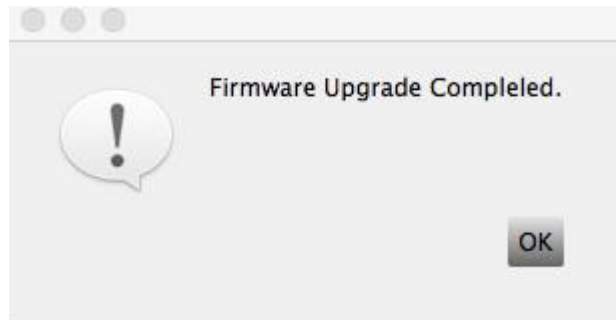


Simple gyroscope calibration

1. Long press the On/Off button to turn on;
2. Plug in USB cable and open the MOZA Assistant;
3. Enter the IMU calibration sub-interface and click Turn off Motor;
4. Place the MOZA Mini gimbal on a sturdy vibration-free surface;
5. Click “Start” on the gyroscope calibration interface. The computer screen will show “success” after the calibration is finished.

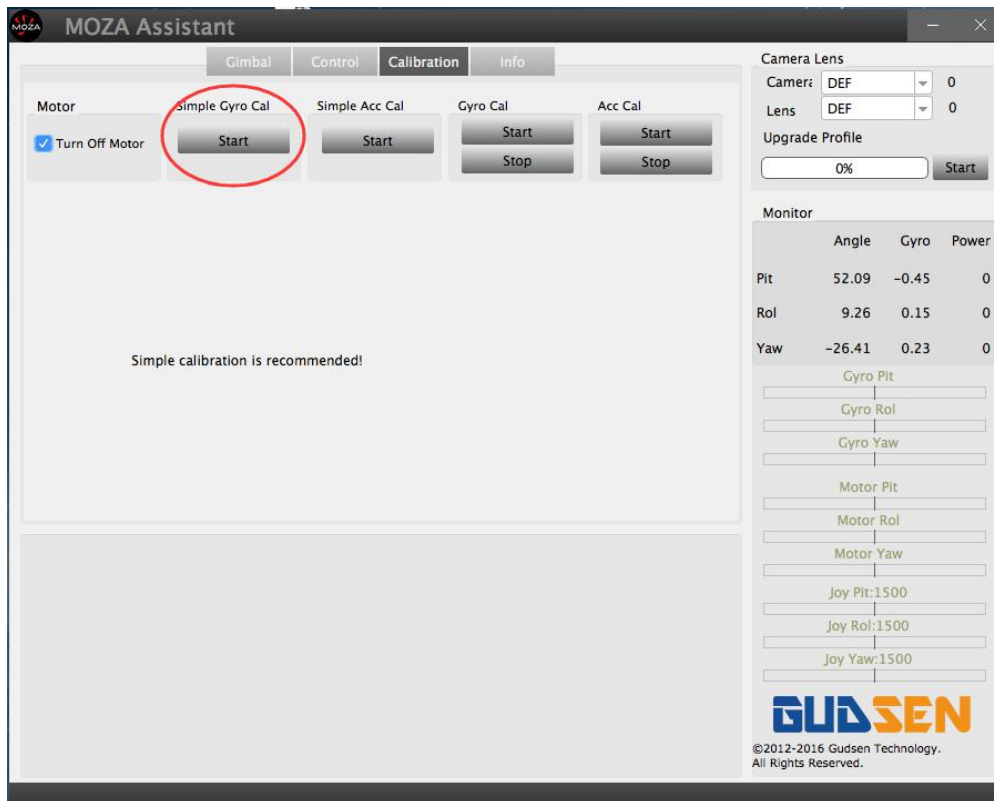

Upgrade Parameters

Click “Start” in the parameter area in the right side and then click “OK” in the pop-up window. Restart gimbal after parameter updating is finished.

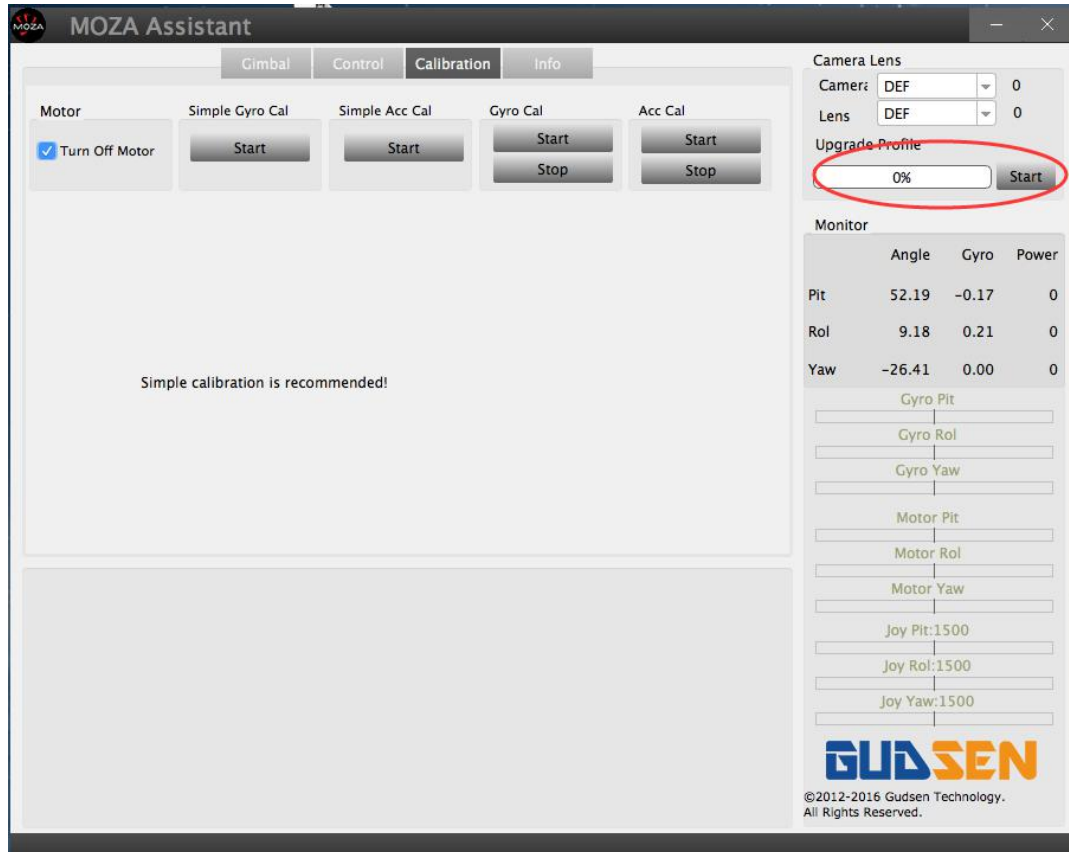

Attention:

1. Network connection is required to download the firmware. Keep network connected during the upgrading;
2. To avoid upgrading failure, please do not turn off the gimbal or unplug the USB cable during the upgrading;
3. A simple gyroscope calibration is required after the upgrading is done;
4. If upgrading could not proceed, please try it again. If it still does not work, please contact support@gudsen.com.