


MOZA iFocus M Motor Upgrade Tutorial.


1. Please download MOZA Master software and install the software. Use the link to download a PDF of the tutorial: <https://www.gudsen.com/upfile/admin/file/download/MOZA-Master-1-3-0-Tutorial.pdf>

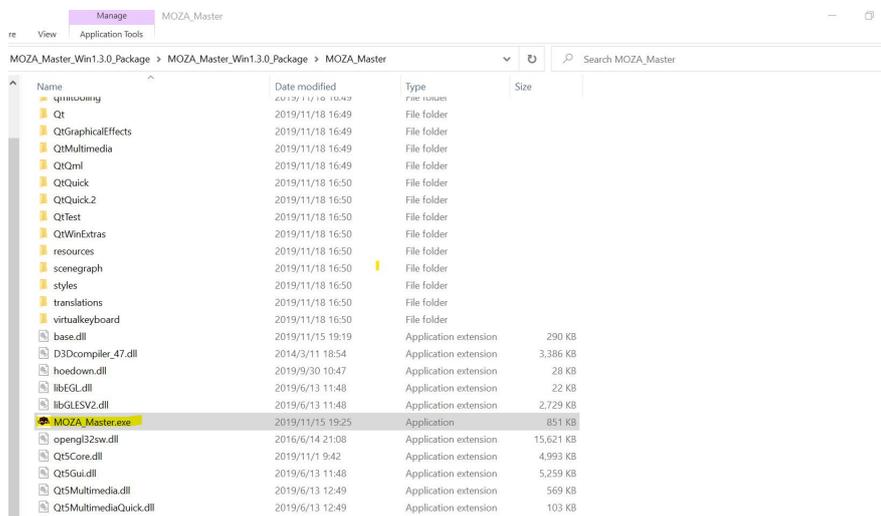


2. Connect iFocus M to the Computer using a USB type-C cable.




3. Open the MOZA Master software (For this example we will use the Windows OS).

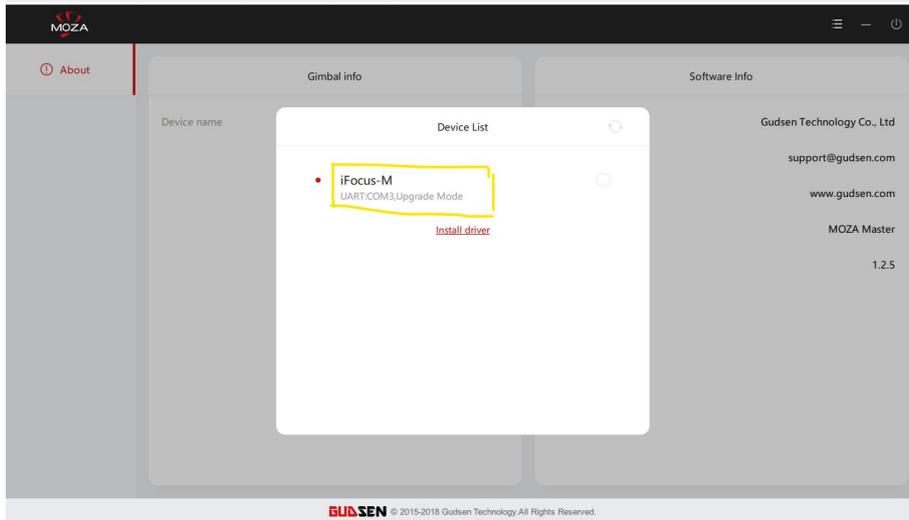

4. Click iFocus-M in the device list to enter the upgrade page.

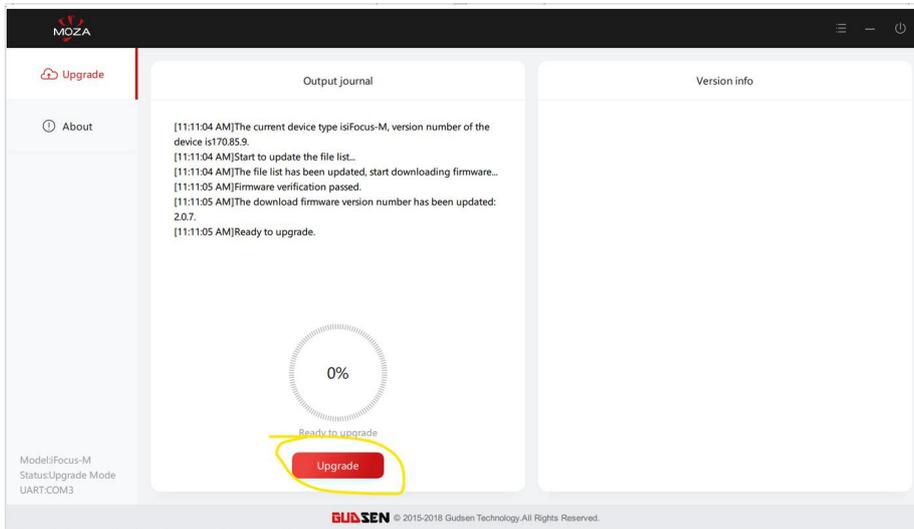

5. Click upgrade to upgrade the firmware of the iFocus M.

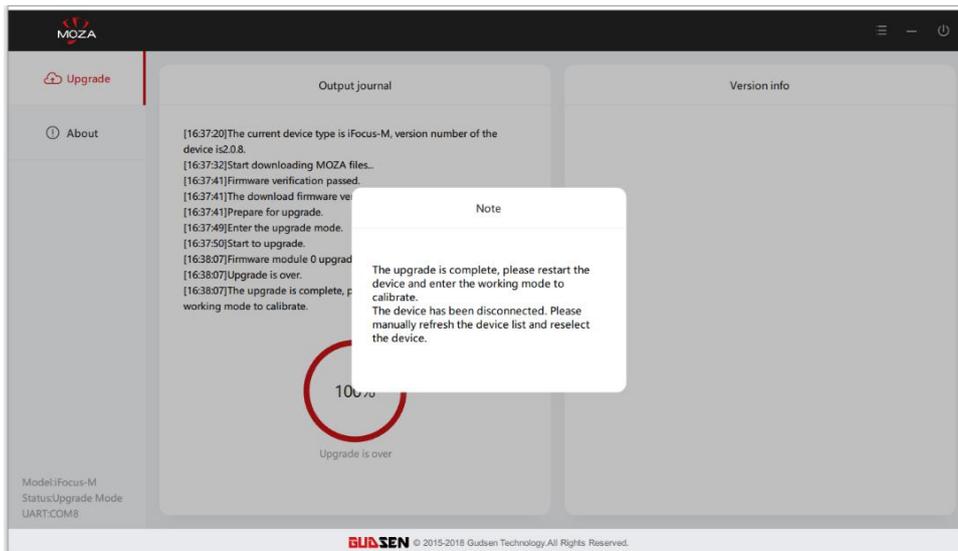

Note: The iFocus M will automatically calibrate after firmware upgrade. Calibration will take 10 seconds, a blue light will flash during calibration. When calibration is finished disconnect the iFocus M from the computer. iFocus M is now updated and ready to be used with a MOZA gimbal.